



PROFESSIONAL INSTALLER GUIDE

2013-2019 Audi A3

7.0-inch Retractable Screen

Navigation and Entertainment System



Professional fitting recommended

Check vehicle specification before install

Test all functions before handover

A3

Vehicle Disassembly

2013-2019 Audi A3 | Remove vents, original display and glovebox trim

Page 2

Disassembly steps


1 Use a trim tool to remove the two centre air-conditioning vents.




2 Remove the two screws at the top inside the vent openings.



3 Remove the original display screen and disconnect the rear wiring.

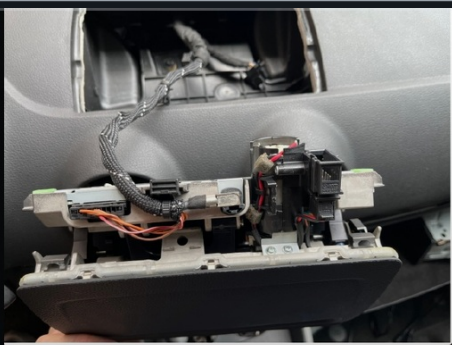

4 Use a trim tool to remove the passenger-side plastic side panel.

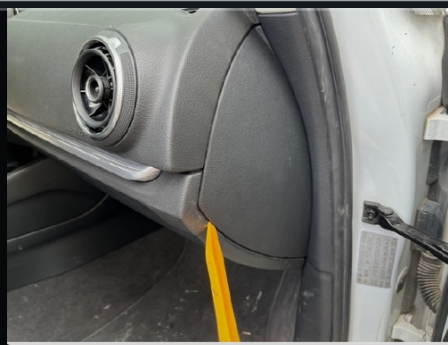

5 Remove the screw on the passenger-side panel.



6 Remove the two screws at the bottom of the passenger glovebox.



Screen Removal

2013-2019 Audi A3 | Remove main unit and original screen from motor bracket

Page 3

Screen removal

7

Remove the screws inside the passenger glovebox.



8

Use the special removal tools to remove the passenger glovebox main unit.




9

Disconnect the wiring from the back of the main unit.



10

Remove the two screws on the right side of the original display screen.

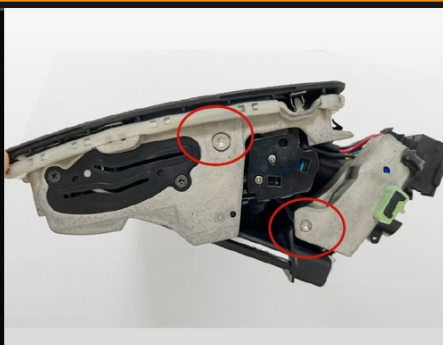


11

Remove the two screws on the left side of the original display screen.



12

Raise the display and remove the screws securing it to the motor bracket.

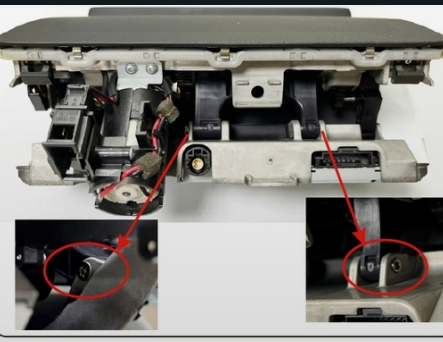

Display Fitment & Wiring

2013-2019 Audi A3 | Fit Autostyle display and connect wiring

Page 4

Fitment and wiring


- 13** After removing the original screen, retain the original motor bracket.




- 14** Install the 7.0-inch Autostyle display into the original motor bracket.




- 15** Connect the display wiring: screen power, Autostyle LVDS and original motor cable.

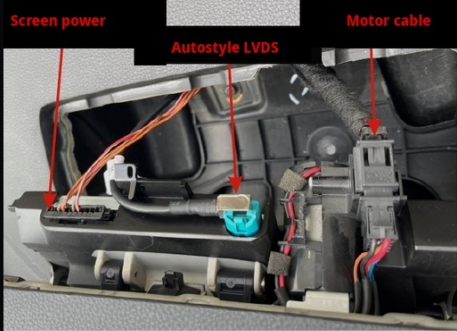


- 16** Connect the Autostyle power cable to the original main unit.

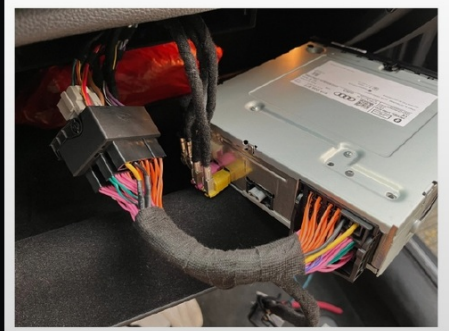

- 17** Connect the original LVDS cable to the Autostyle main unit, then connect power, GPS and 4G antenna cables.

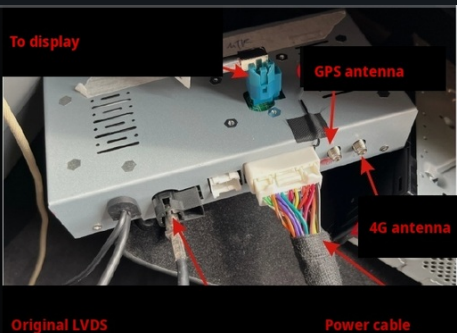

- 18** Reassemble the vehicle and test all functions to complete the installation.

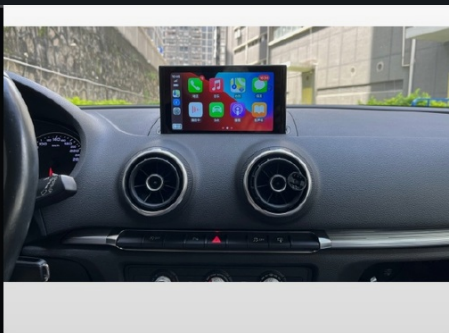

System Setup Instructions

2013-2019 Audi A3 | MTK and Qualcomm configuration reference

Page 5

Factory setup

- 1** MTK setup: Vehicle Information > Original Main Unit Parameter Settings. Select original resolution: 2014-A3 (400x240).



- 2** MTK setup: Settings > Car System Settings > About Device, then tap the settings icon and enter password 8888.



- 3** MTK CAN type selection: select 152. Audi (Medium Code Yitong).



- 4** Qualcomm setup: Settings > Factory Settings > enter password 8888.



- 5** Qualcomm original screen display type: 2016 models [05] A3_400x272_Full Screen (Pre-2017); 2017 models [07] A3 Full Screen (2014-2016).



- 6** Qualcomm CAN protocol selection: choose [3] MIB_A3.

